


<https://www.kipogeorgiki.gr>


# FISKARS®

## Timer manual

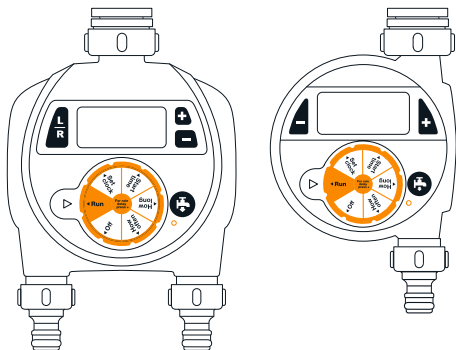


18ο χλμ. Ν.Ε.Ο.Α.Κ. - Τηλ.  
210 5573739

## Timer, single outlet

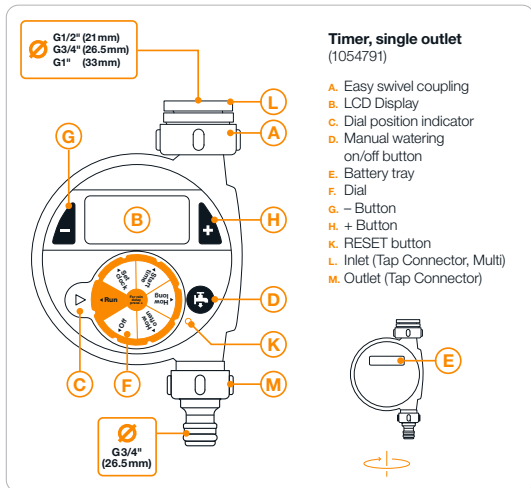

## Timer, dual outlet

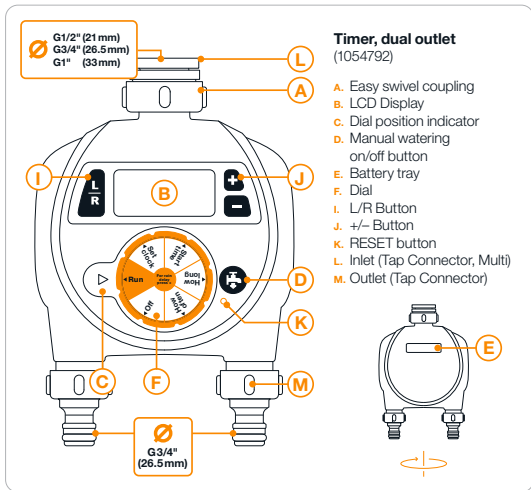

**UK Timer parts** **A.** Easy swivel coupling  
**B.** LCD Display **C.** Dial position indicator  
**D.** Manual on/off button **E.** Battery tray  
**F.** Dial **G.** – Button **H.** + Button **K.** RESET button  
**L.** Inlet (Tap Connector, Multi)  
**M.** Outlet (Tap Connector)

**ATTENTION: Please read the manual before using. / Do not direct the water jet towards persons or animals! / Do not direct the water jet towards electrical equipment!**

**Installing the batteries** **1.** Remove the tray from back of the Timer by sliding it out. **2.** Insert two AA (1.5V) alkaline batteries (not included) and place the tray back. **3.** Replace battery when low battery icon flashes.

**Programming the timer** **1.** Rotate the dial to positions indicated for setup (for **TIMER, DUAL:** **2.** Press **L/R** button to switch between left and right outlet for all programming). **3.** Left and right outlets can function at the same time. (Water flow will decrease when both sides are used at once). **NOTE:** The dial should be in the **Run** position for the Timer to operate (programmed mode or manual mode).

**Set clock** **1.** Rotate the dial to **Set clock**.  
**2.** Clock display will be in AM or PM.

**3.** Press the **+** or **–** button to advance or reverse clock time (hold button for quick advance).

**Start time** **1.** Rotate the dial to **Start time** (for **TIMER, DUAL:** Press **L/R** to choose Left or Right valve). **2.** Press the **+** or **–** button to set the start time (hold button for quick advance).

**How long** **1.** Rotate the dial to **How long**. **2.** Press the **+** or **–** button to set the length of watering time (1 minute up to 360 minutes).


**How often** **1.** Allows you to set the program to repeat every 6, 12 hours, or from 1 to 7 days. **2.** Rotate the dial to **How often**. **3.** Press the **+** or **–** button to set the frequency.

**Run** **1.** Rotate Dial to **Run**. **2.** Timer waters according to programmed time, duration, and frequency. **3.** The start times and cycle duration are maintained during **Off** or **Run** mode. **4.** The dial must remain in **Run** position for the cycle to run. If the dial is turned to any other position, watering will stop. **5.** Rain drops will be shown when the watering is on.


**Set rain delay (watering delay):**

**1.** With the dial in the **Run** position, pressing **(+)** will cause a 24 hour delay to the program (for **TIMER, DUAL:** Same delay will occur on both Left and Right valves).

2. Delays of 0, 24, 48, and 72 hours are possible. Delay time can be changed by pushing **+** or **-** at any time. 3. Display will flash between clock and hours remaining before programmed cycle resumes. 4. To remove watering delay, turn dial to **Off** and then back to **Run** or reduce the delay time to 0.

**Manual (instant) watering** 1. To water instantly without interrupting the set cycle, press the  button to start watering.

2. This mode will function only when the dial is on **Run** position. 3. For **TIMER, DUAL**: Choose Left or Right valve (Valves can have different watering duration set).

4. Press the **+** or **-** button to adjust from 0 to 240 minutes at any time. 5. To resume programmed cycle, press the  button again or rotate the knob to **Off** and back to **Run**.

**Off** Turning the dial to the **Off** position from any other position will stop the manual or programmed watering immediately.

**Reset** Pressing the **Reset** button for 2 seconds will erase all the programs and the Timer will return to factory shipped condition.

**Installation** 1. Attach Timer to an outdoor hose faucet and turn faucet on after programming. 2. Not for use on outlet end of 'Y' connectors or other hose accessories.

## Troubleshooting

UK

### **PROBLEM: There is no display.**

Check if: 1. Batteries are installed properly. 2. Batteries are very low.

### **PROBLEM: Timer does not water or does not come on at desired time.**

Check if: 1. The dial position is at **Run**. 2. Faucet is on. 3. Clock is set to correct time including AM and PM. 4. Batteries are low. 5. For **TIMER, DUAL**: Desired outlet (Left or Right) is programmed. 6. Rain delay is on. 7. Start time is set to desired time including AM and PM.

### **PROBLEM: Water won't turn off.**

Check if: 1. Watering duration is set to desired time 2. The Manual mode is on 3. No power/batteries are included.

**Warranty terms** The manufacturer shall repair or replace, through the dealer, any parts of the product found to be faulty due to manufacturing defects, for a period of 24 months as of the date of purchase.

### **THE WARRANTY DOES NOT COVER DEFECTS DUE TO TAMPERING, IMPROPER USE OR WEAR.**

The warranty is valid only if the customer returns to the product to the dealer complete in all its parts together with the receipt or other document proving the date of purchase.

## EU Declaration of Conformity

Fiskars Oy, Finland hereby certifies that when leaving Fiskars factory the **TIMER, SINGLE** and **TIMER, DUAL** are in accordance with harmonized EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the units are modified without Fiskars approval. CE declaration of conformity in accordance with European std EN 60730-1; 2016 and other applicable directives.

<b>BATTERY</b>	2x1,5V AA
<b>MIN/MAX PRESSURE</b>	0.5/12 bar
<b>MIN/MAX TEMPERATURE</b>	+1/+60°C
<b>TAP CONNECTION</b>	G1/2, G3/4, G1
<b>OPERATING TIME FOR BATTERIES APPROX.</b>	1 year

**FI Ajastimen osat** **A.** Helppo kääntökytkentä **B.** LCD-näyttö **C.** Valitsimen asennon ilmaisin **D.** Manuaalinen virtapainike **E.** Paristolokero **F.** Valitsin **G.** - Painike **H.** + Painike **I.** L/R-painike **J.** Painike +/- **K.** RESET-painike **L.** Tulo (Hanaliitin, Multi) **M.** Ulostulo (Hanaliitin)

**HUOMIO: Lue käyttöohje ennen käyttöönottoa. / Älä suuntaa vettä**

**ihmisiin tai eläimiin. / Älä suuntaa vettä sähkölaitteisiin!**

**Paristojen asettaminen** **1.** Irrota lokero ajastimen takaa liu'uttamalla se ulos. **2.** Aseta lokeroon kaksi 1,5 voltin AA-alkali-paristoa (ostettava erikseen) ja aseta lokero takaisin paikalleen. **3.** Vaihda paristot, kun alhaisen akkuvirran kuvake vilkkuu.

**Ajastimen ohjelmointi** **1.** Kierrä valitsin tarvittaviin asentoihin asetuksia määrittäessä (**AJASTIMELLE, KAHDELLA ULOSTULOLLA:** **2.** Ohjelmointia varten voit vaihtaa vasemman ja oikean lähdön välillä painamalla **L/R**-painiketta). **3.** Vasen ja oikea ulostulo voivat toimia samanaikaisesti. (Molempia puolia yhtäaikaan käytettäessä veden virtaus on pienempi.) **HUOM:** Valitsimen pitää olla **Run**-asennossa, jotta ajastin toimii (ohjelmoitu tai manuaalinen tila).

**Aseta kello** **1.** Käännä valitsin asentoon **Set clock** (Aseta kello). **2.** Kellossa näkyvä aika on aamupäivällä (AM) tai iltapäivällä (PM). **3.** Varhenna tai myöhennä kellonaikaa painamalla painiketta + tai - (voit edetä nopeammin pitämällä painiketta painettuna).

**Aloitus aika** **1.** Käännä valitsin asentoon **Start time** (**AJASTIMELLE, KAHDELLA ULOSTULOLLA:** Valitse vasen tai oikea venttiili painamalla **L/R** (vasen/oikea). **2.** Aseta

<https://www.kipogeorgiki.gr>

**FISKARS®**

# WATERING MADE EASY

For more inspiration go to [fiskars.com](https://www.fiskars.com)

18ο χλμ. N.E.O.A.K. - Τηλ.  
210 5573739